 


A40 Pro



User Manual

Accessories

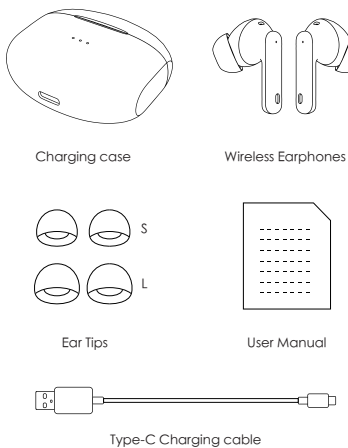

01

 
Usage tips

Please read this manual carefully before using.

- If charge the earphone while it is wet with sweat, etc. the charging terminals will be corroded. Pls wipe off moisture with a dry soft cloth, and let it dry naturally before recharging.



- Don't leave the earphone in the pocket when washing clothes such as pants, shirts, etc.

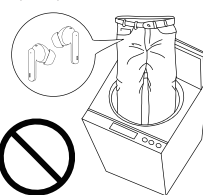

02

Tips

 
▲ When one earphone does not work (earphones don't have actively pairing function).

Solution:


Step 1: Turn off your mobile's Bluetooth.



Step 2: Put the two earphones back into the charging case and close the lid.





 Step 3: Take out the two earphones and place them on the table at the same time, wait for 15s to pair automatically.



03

  Product Details

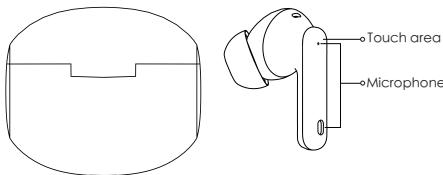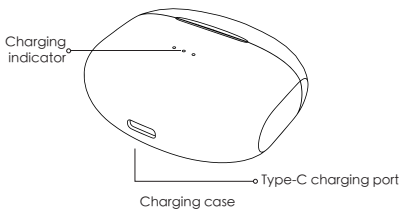


04

Product Usage

- ▲ Use the original charging cable to charge. Fast charging are prohibited.
- ▲ Charge the charging case firstly before using earphones for first time.

 - Charging case indicator lights will flash when it charging for the case by Type-C cable. The lights will stay on after fully charged.
- Charging case indicator lights will stay on when it charging for the earphones. The lights will be off after fully charged.

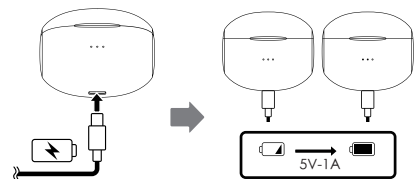

Power on

1. Open the lid of the case, earbuds will power on automatically.
2. In power-off state, long press two earbuds for 3 seconds to power on.

 
Power off

1. Put the earbuds into the case then close, the earbuds will power off.
2. Long press two earbuds for 5 seconds to power off.

05


Bluetooth Pairing

Take out earphones and search "Earbuds" on your mobile to connect. (Clear pairing: Quickly 5-click any side in the power-on state, the headset will be turned off. After restarting, the pairing history information is cleared.)

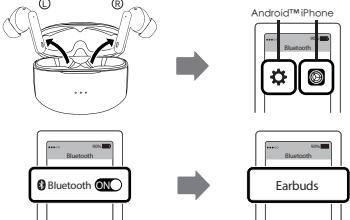


How to Wear

 Take the earphones out and put them in the ears, and wiggle them slightly for the best fit and comfort.

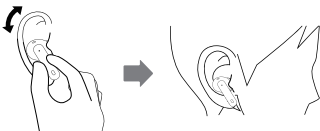


06

 Left Earphone Function

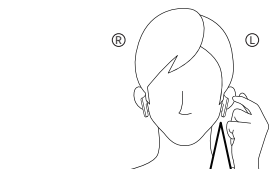

Short Press

 - 1 click Play/Pause
- 2 click ANC/Transparency mode switching
- 3 click Gaming/Music mode switching




Long Press

- Long press 2s Last song
- Long press 2s Reject call

07

 Right Earphone Function

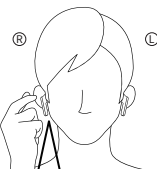

Short Press

- 1 click Play/Pause
- 2 click Voice assistance activate
- 3 click Gaming/Music mode switching

Long Press

- Long press 2s next song
- Long press 2s Reject call

08

Call Function

 
Short Press

- 1 click Receive/Hang up call



Earphone charging

Put the earphone into the charging case to charge when it indicates low power.



Product Specification

- Bluetooth Version: V5.3
- Charging voltage: DC 5V
- Talk time: 3.5 hours
- Transmission distance: 10m-15m
- Stand-by time: 140 days
- Music playtime: 5.5 hours
- Charging time: 1.5 hours
- Frequency Response: 20-20000 Hz
- Battery capacity: 33 mAh
- Charging case battery: 300 mAh

09

Safety Information

Before using and operating the earphones, please read and follow the below precautions to ensure the best performance of it and to avoid dangerous or illegal situations.

Hearing Loss

- Listening to sound at high volume may permanently damage your hearing. When you use earphones to listen to music or calls, it is recommended to use the minimum volume required for music or calls to avoid hurting your hearing.
- Exposure to high-level volume while driving, driving attention may be distracted and cause accidents.

Operating environment

- Do not use the device in dusty, sharp, compact or near magnetic fields to avoid failure of the internal circuit of the device.
- When installing the device, please keep away from strong magnetic fields or electrical appliances with strong magnetic fields, such as ovens and refrigerators.
- Do not use the device in thunderstorm weather. Thunderstorm weather may cause equipment failure or electric shock hazard.
- Please use the device within a temperature range of -10 °C ~ +55 °C, and store the device and its accessories within a temperature range of -40C ~ +70 °C. When the ambient temperature is too high or too low, it may cause device function failure. When the temperature is below 5 °C, the performance of the battery is limited.
- Do not place the device in direct sunlight, such as the dashboard or window sill of a car.
- Do not place the device near heating sources or exposed fire sources, such as electric heaters, ovens, water heaters, stoves, candles, or other places that may generate high temperatures.
- Do not place sharp metal objects such as pins near the device's earpiece or speaker, otherwise the metal objects may adhere and cause injury to you.
- Child health
- This device and its accessories may contain some small parts. Keep the device and its accessories in a place out of children's reach. Children may inadvertently damage the device and its accessories, or swallow small parts, causing suffocation or other hazards.

10

- This device is not a toy, children should use this device under adult supervision.
- Battery safety
- Do not disassemble or modify the battery, or immerse in water or other liquids, to avoid battery leakage, excessive, fire or explosion.
- Do not drop, crush or puncture the battery. It can cause internal short circuits and overheating.
- This device is equipped with a non-removable built-in battery.
- Do not replace the battery yourself to avoid damage to the battery or device.
- Charger safety
- When charging the device, the power socket should be installed near the device and should be easily accessible.
- When charging is completed or not charging, disconnect the charger from the device and unplug the charger from the power outlet.

Precautions

1. The earphones should be stored in a dry/ventilated environment and avoid contacting with oil, water vapor, steam, moisture and dust to prevent the performance of the product.
2. Avoid using harsh organic solvents or items containing these ingredients to clean the earphones.
3. The earphones should be used correctly according to the requirements, and pay attention to the effect of the environment on the product. Make sure the connection is smooth and recommend a distance between them within 10 meters.
4. If the earphone failed to connect or with poorly connection, please do not dismantle them or the accessories privately. Otherwise no warranty.
5. When charging the earphones, please use the standard car charger or the charger specified by our company.
6. To ensure the normal use of the earphones, please make sure they are fully charged.

11